



OIL SYSTEM BREATHER ASSEMBLY

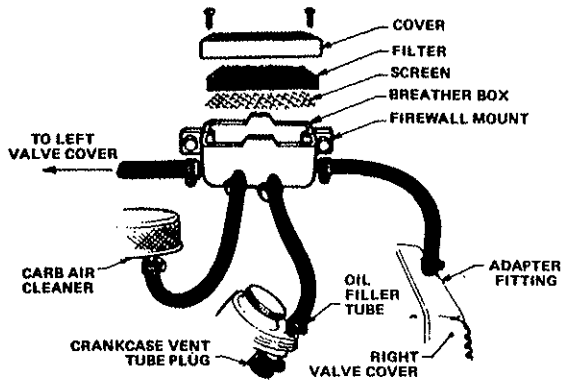


99-4037-0

OIL SYSTEM BREATHER ASSEMBLY

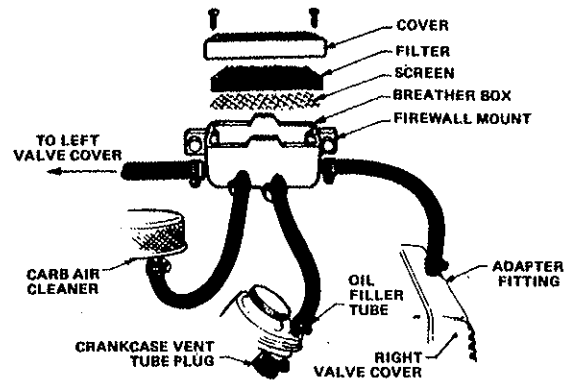


99-4037-0

OIL SYSTEM BREATHER ASSEMBLY

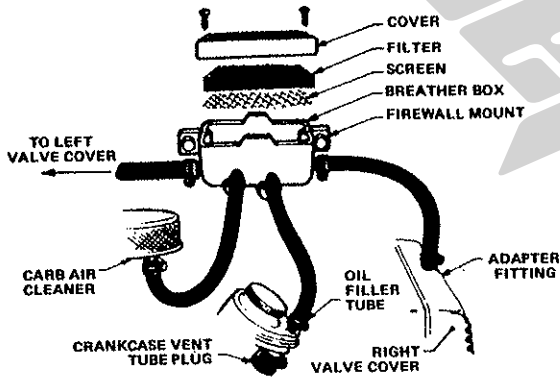


99-4037-0

OIL SYSTEM BREATHER ASSEMBLY

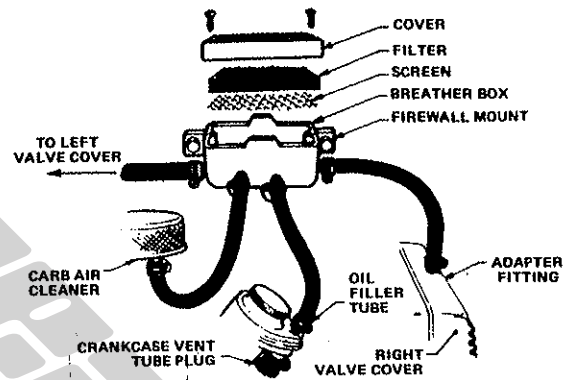


99-4037-0

OIL SYSTEM BREATHER ASSEMBLY

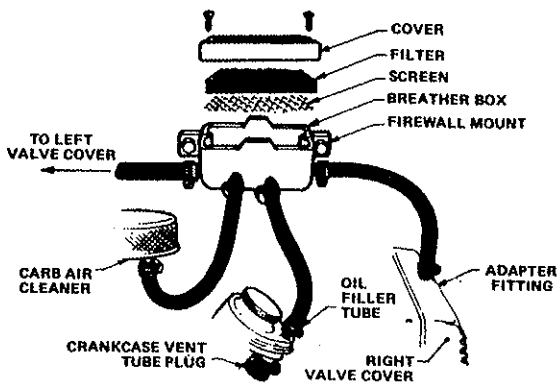

99-4037-0

OIL SYSTEM BREATHER ASSEMBLY

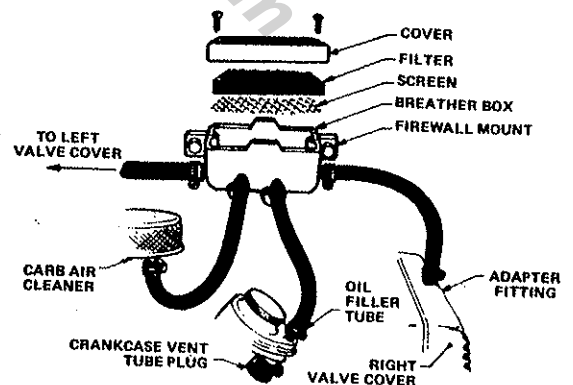

99-4037-0